


PRINTING AND FITTING SPECIFICATIONS

- Print this document on A4 sheets of paper (21 x 29.7cm).
- Ensure you print at 100 % scale.
- Measure both sides of this box to check scale is correct.
- Fit the prints together following the numbering system on the edge of each sheet. Ensure crosses are aligned.
- Tape the sheets together and cut around the Pack's outline
- When fitting this printed template to your bike, keep in mind that the Frame Pack will be more flexible as it is built from fabric.

10cm
3.9in

10cm / 3.9in

SCALE EXAMPLE OF FINAL TEMPLATE

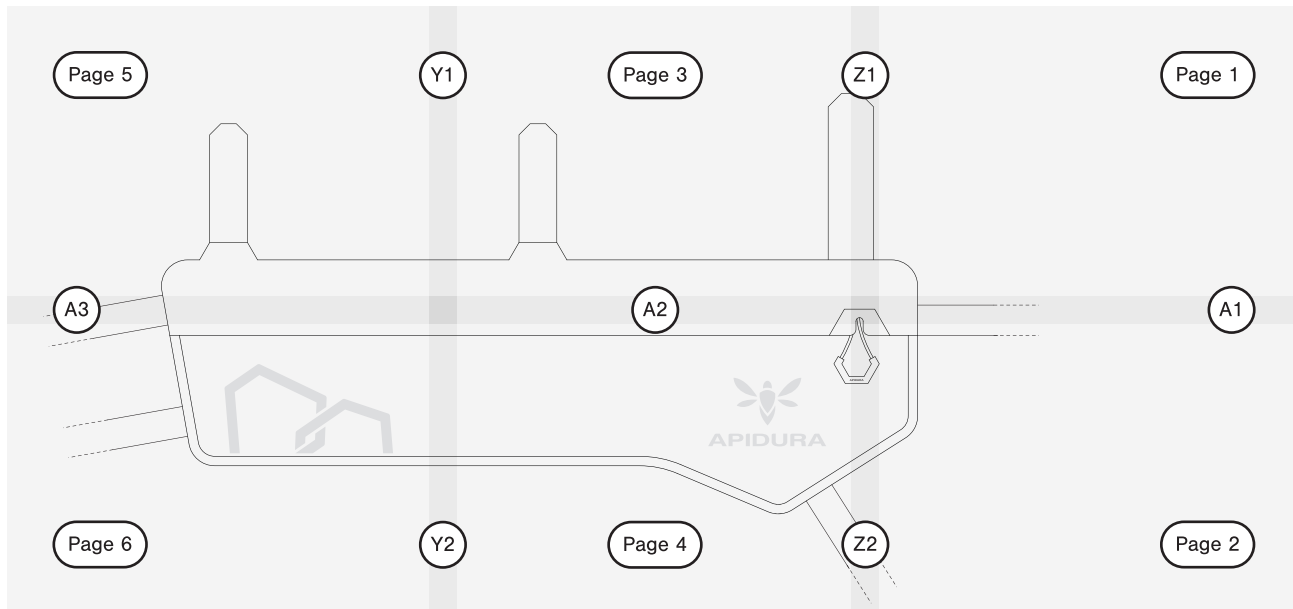

A1
X


This webbing strap is
29cm long (11.4in long)


X Z1

X


A1
✕

This webbing strap is
29cm long (11.4in long)

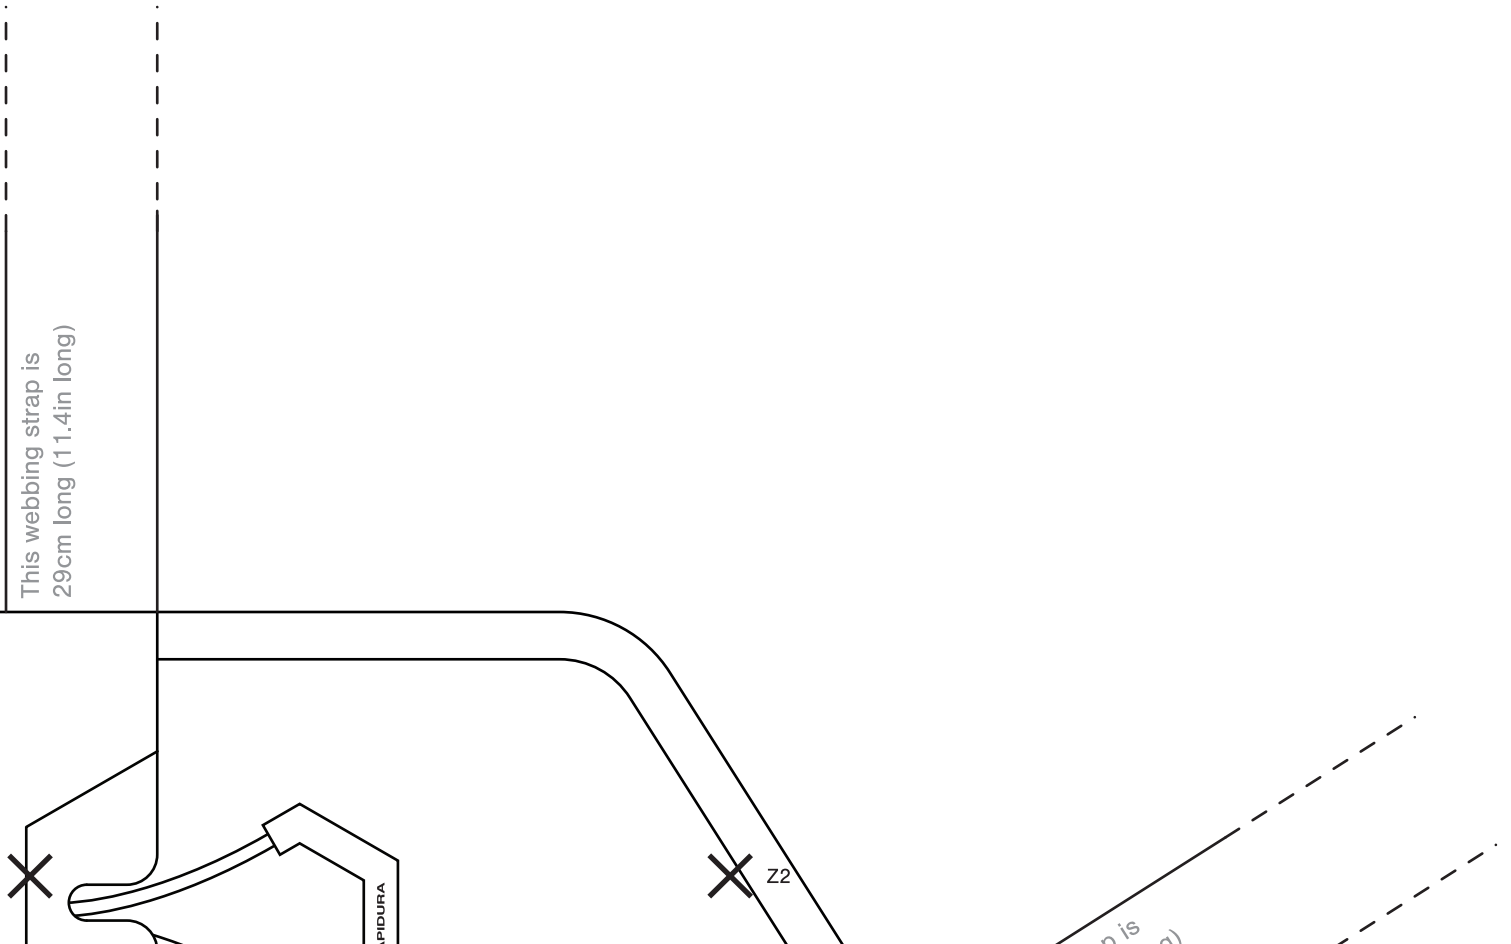

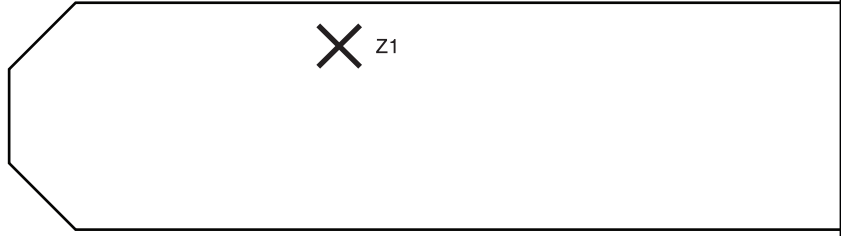


A2
X

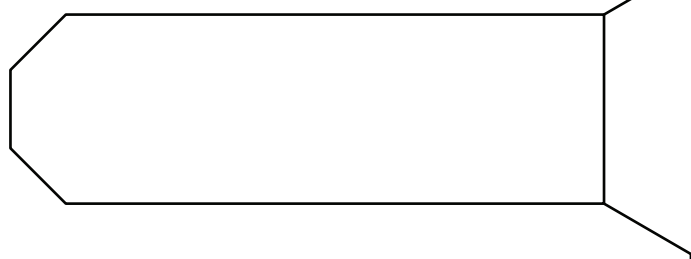

Y1
X

X

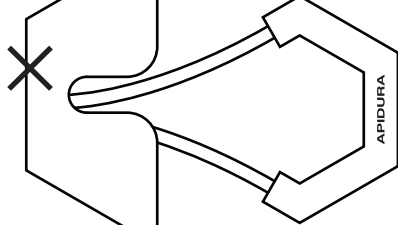

X Z2

This webbing strap is
26cm long (10.2in long)




APIDURA

A2
X

X Y2

X Y1

X

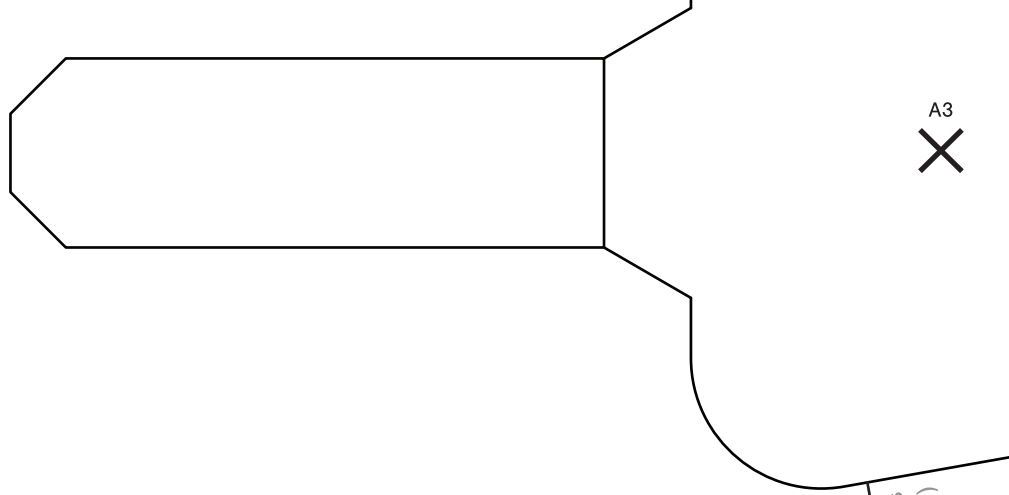

A3
X

This webbing strap is
21cm long (8.3in long)



Y2



A3

EXPEDITION FRAME PACK (6.5L TALL)



This webbing strap is
21cm long (8.3in long)

This webbing strap is
21cm long (8.3in long)